


# PLEASE READ THIS INSTRUCTION MANUAL BEFORE INSTALLATION.

★ Suggest preparing tools in advance:  
Gloves.

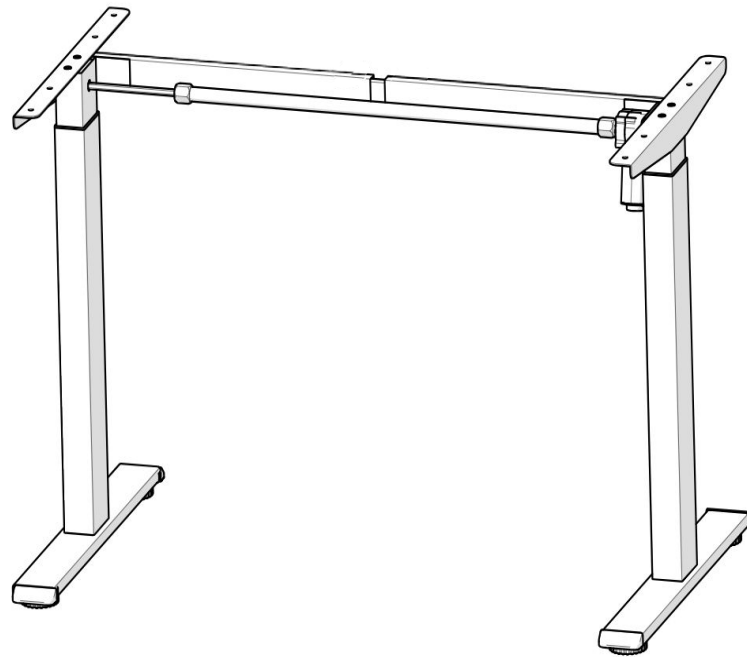

⚠ Make sure the desktop is not touching any walls.

⚠ The working environment temperature is 0-40 , the product is far away from corrosive gases, liquids and dusty objects.

⚠ Do not disassemble the product privately to prevent product failure and damage to human bodies caused by electronic components.

⚠ Ensure that other parts of the body such as hands are in a safe position during operation to avoid unnecessary harm to the human body. During manual reset, the anti-collision function will not be activated.

⚠ Make sure no obstacles are in the desk's path.


⚠ Please read the instruction carefully before using the product. Under no circumstances does the manufacturer accept warranty claims or liability claims for damages personal injury caused from improper use or handling of the desk frame.

⚠ Reset is required when first use or after power off.

\*If the assembled desk display reads "RST" , press the down button to reset the desk.






\*Gyro in Handset, please keep the controller horizontal and static during usage.

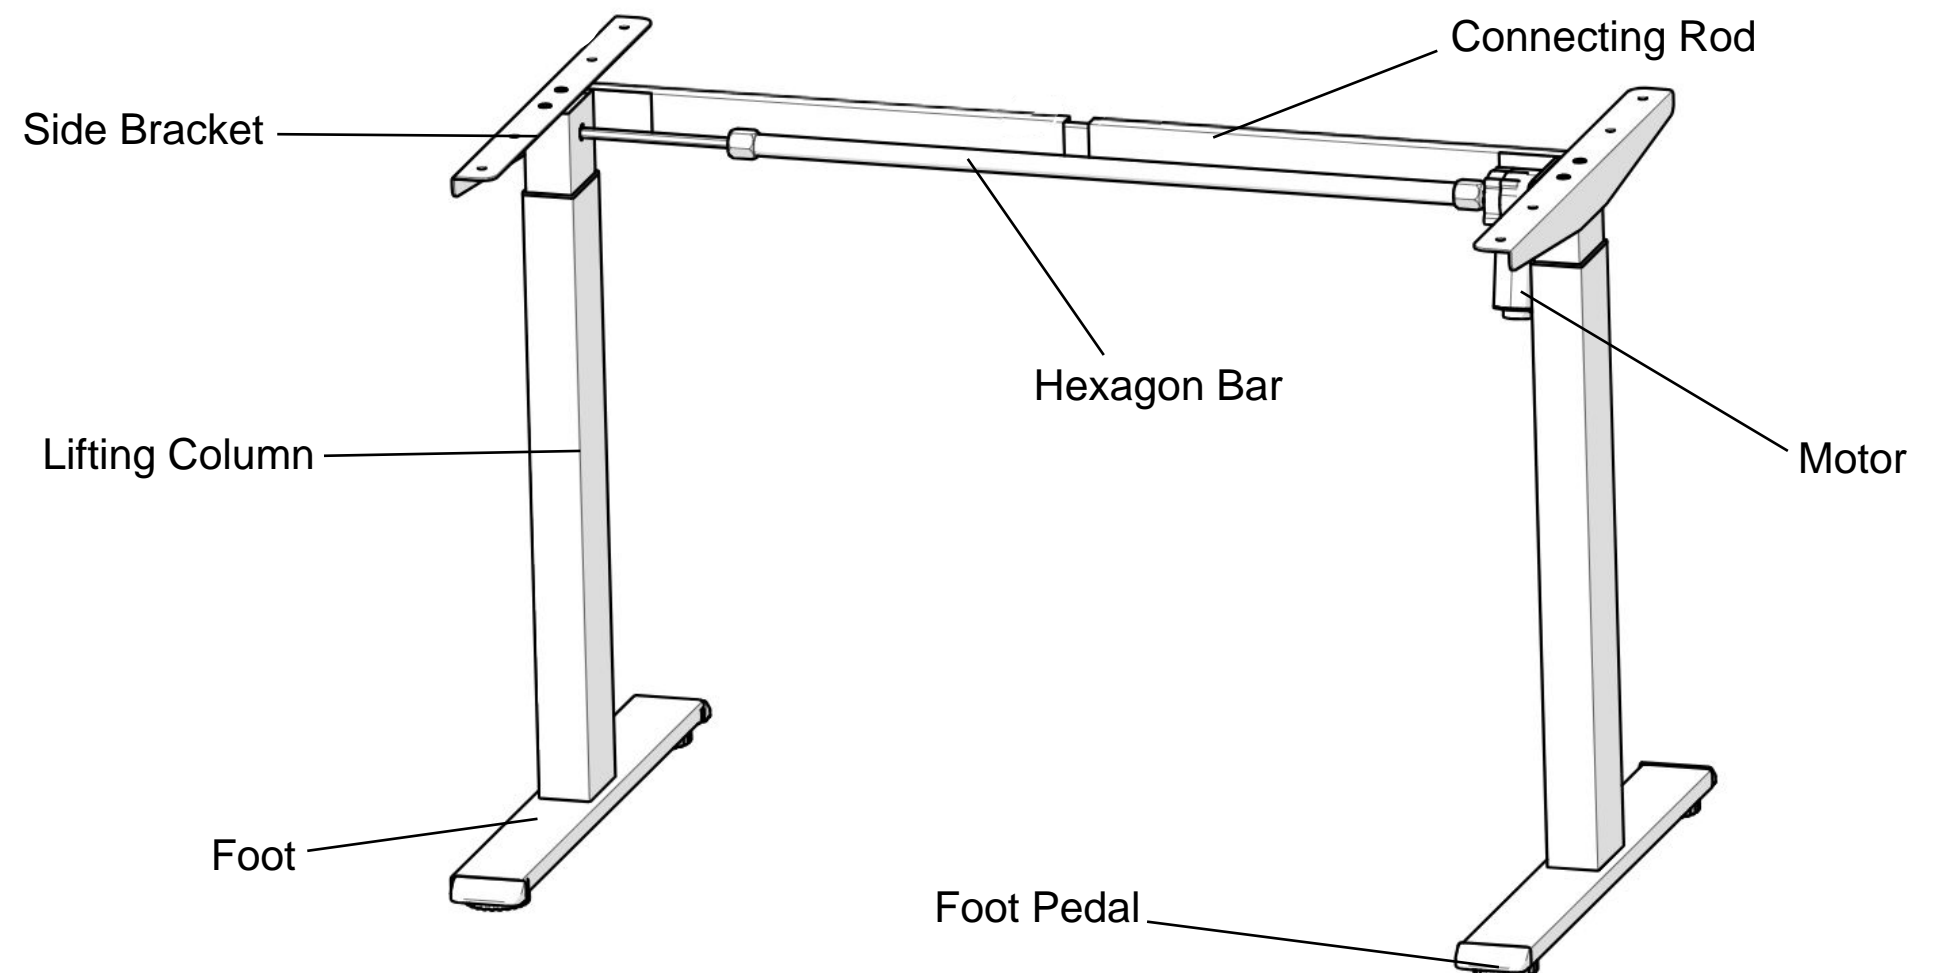Parts Name	Qty
Lifting Column	2
Side Bracket	2
Foot	2
Foot Pedal	4
Connecting Rod	1
Hexagon Bar	1
Motor	1




## Components



## Qty

	M6*12	4
	M6*16	8
	M6*6	4
	M6*8	4
	M4*12	2
	M5*16	8
	M3	1
	M4	1

Power Adapter

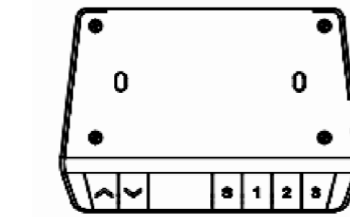


Handset

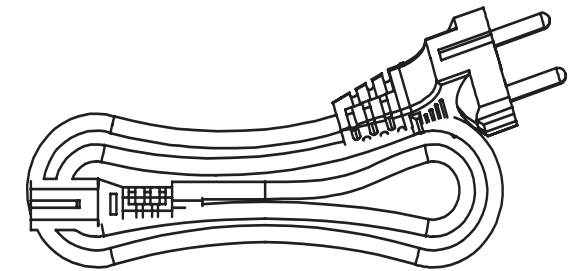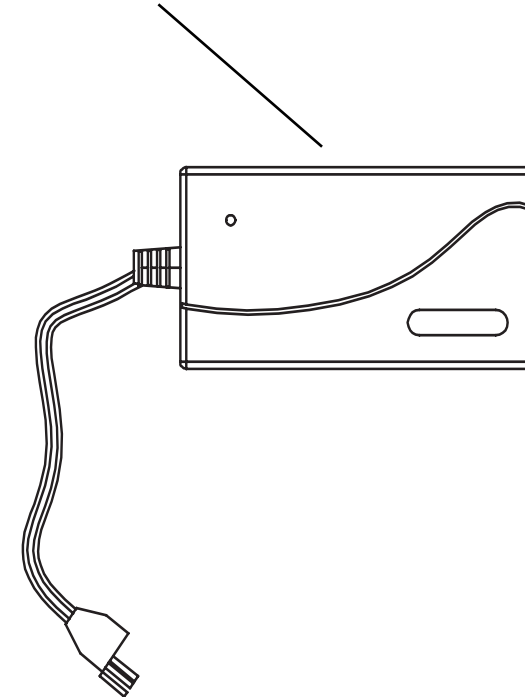


Power Cord

1

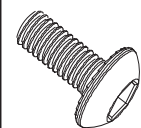

M6\*16 Qty: 8

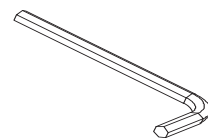


M4

**Assemble the Foot.**


**Use M6\*16 Screws.**

**( Each Foot use 4 screws )**

1

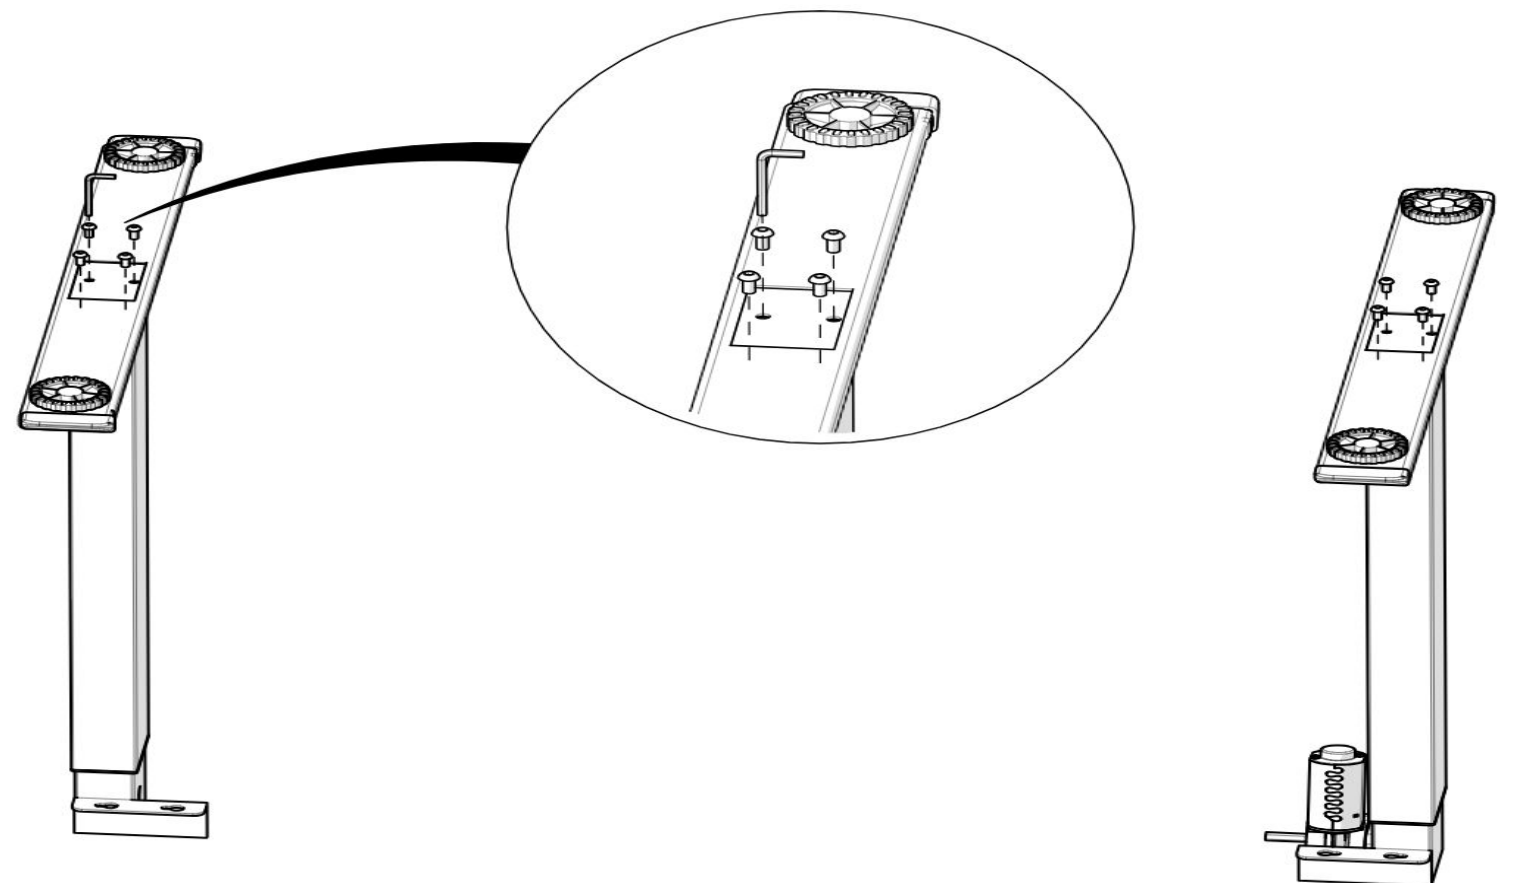

2

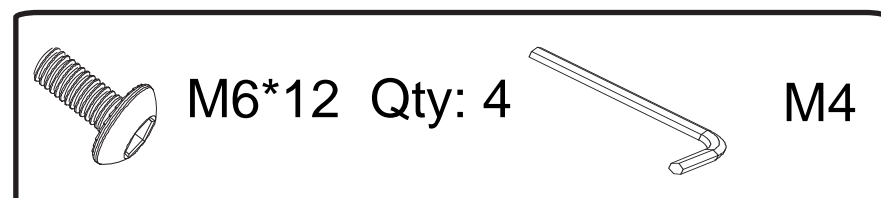


**Assemble two sides of the Connecting Ro**


**Use M6\*12 Screws**

**( Each side use 2 screws )**

2

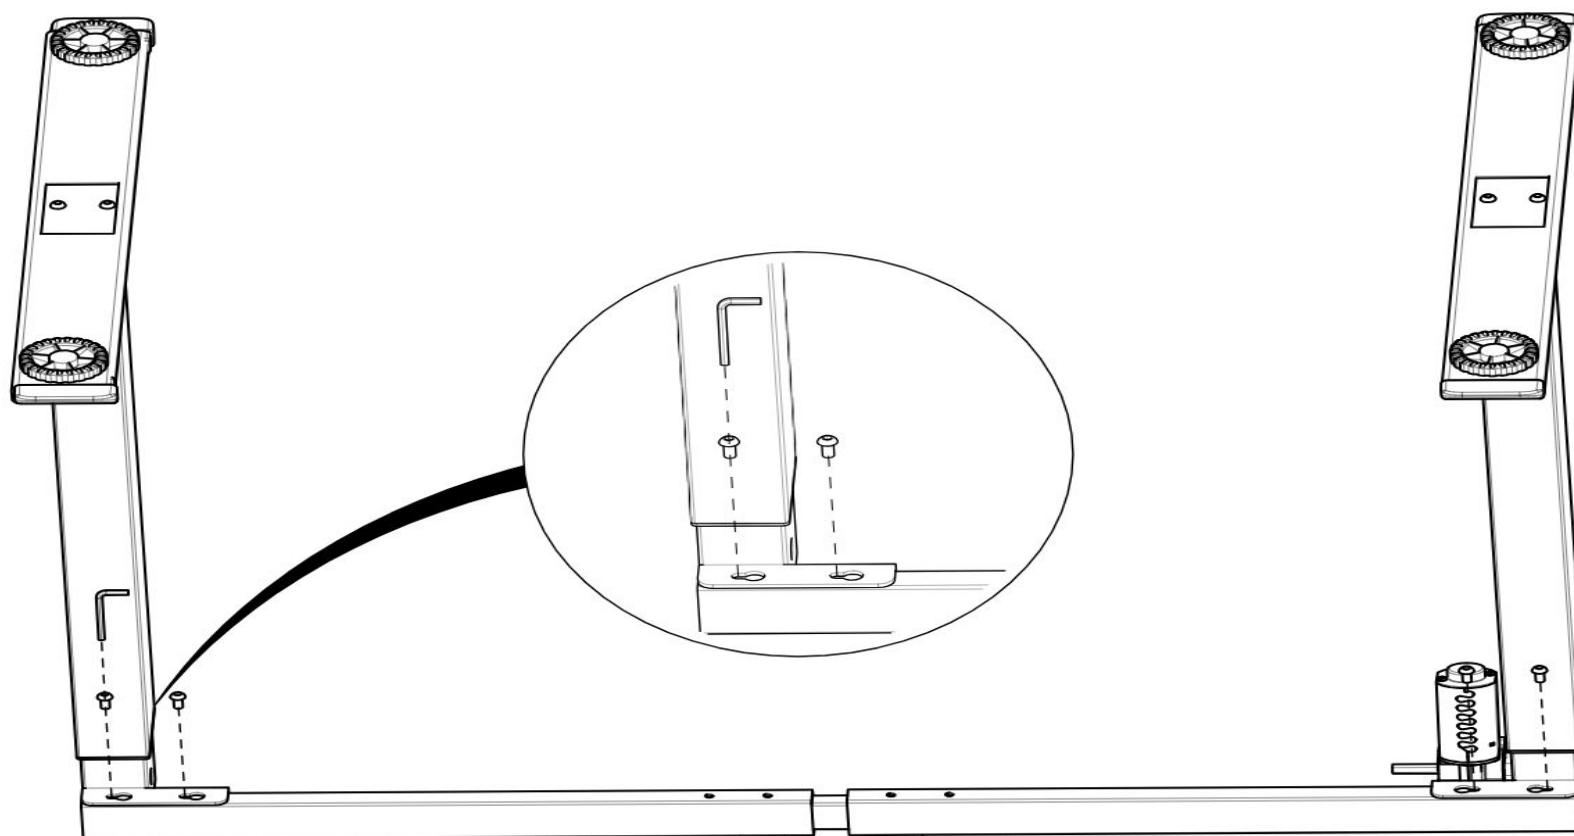

3

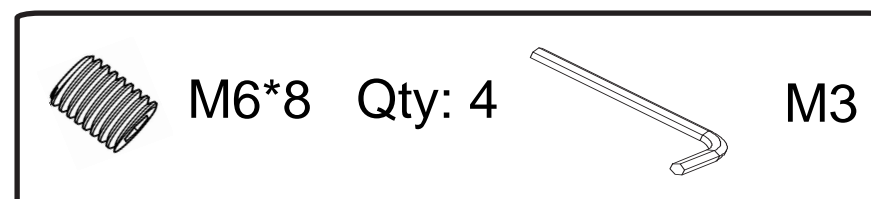


**Assemble middle of the Connecting Ro**

**Use M6\*8 Screws**

**( Totally use 4 screws )**

3

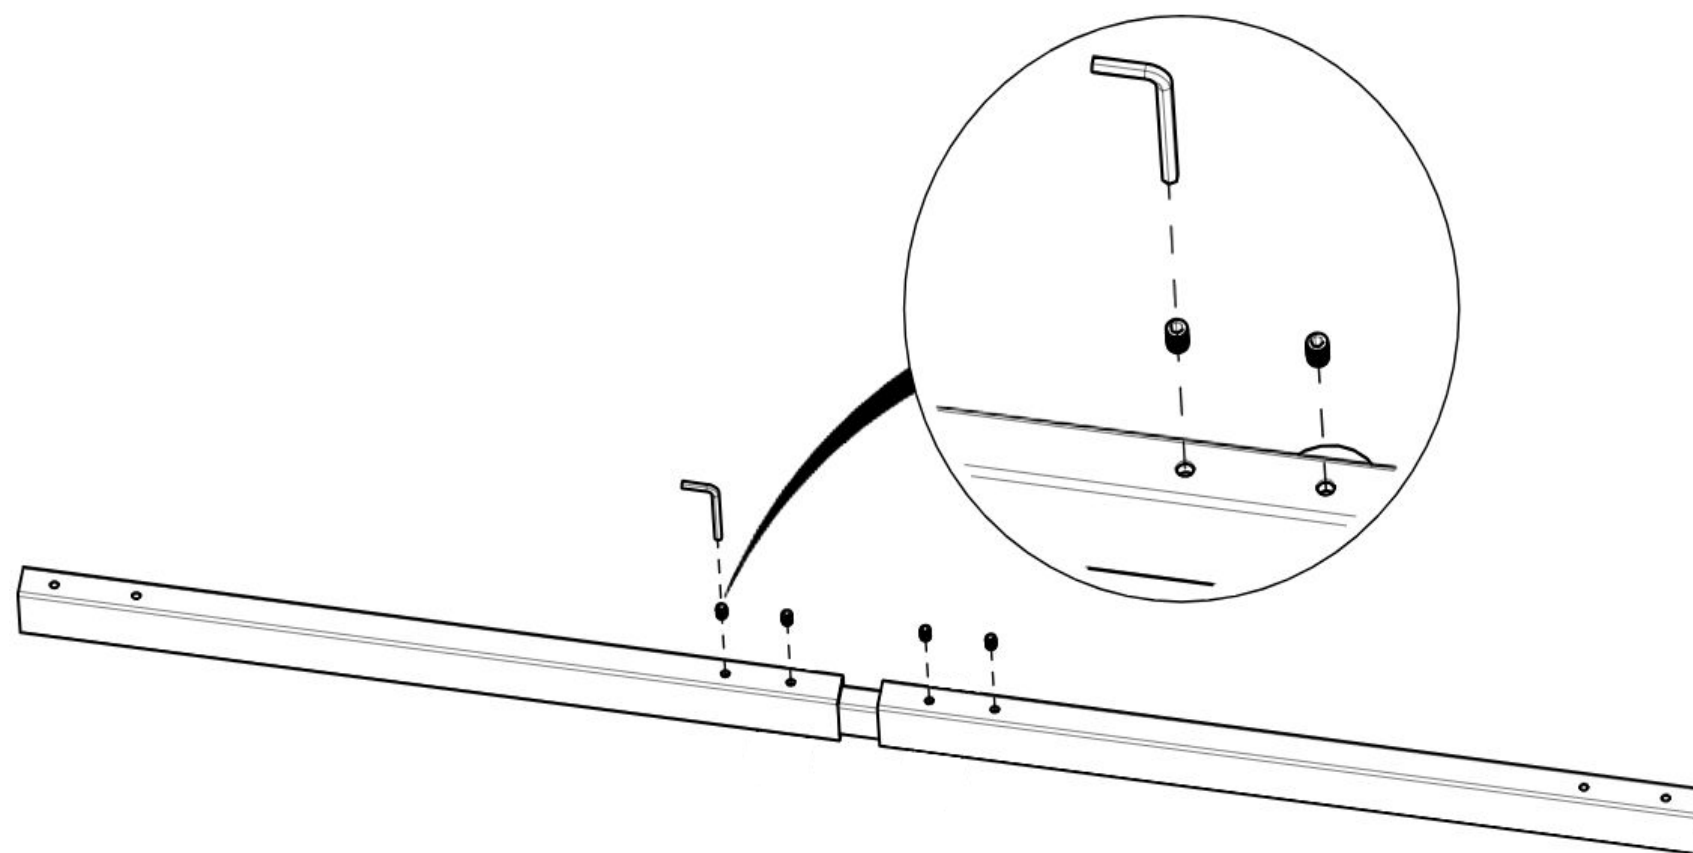

4




M6\*6 Qty: 4

M4

**Assemble the Side Brackets****Use M6\*6 Screws****( Each Side Bracket use 2 screws )**


4

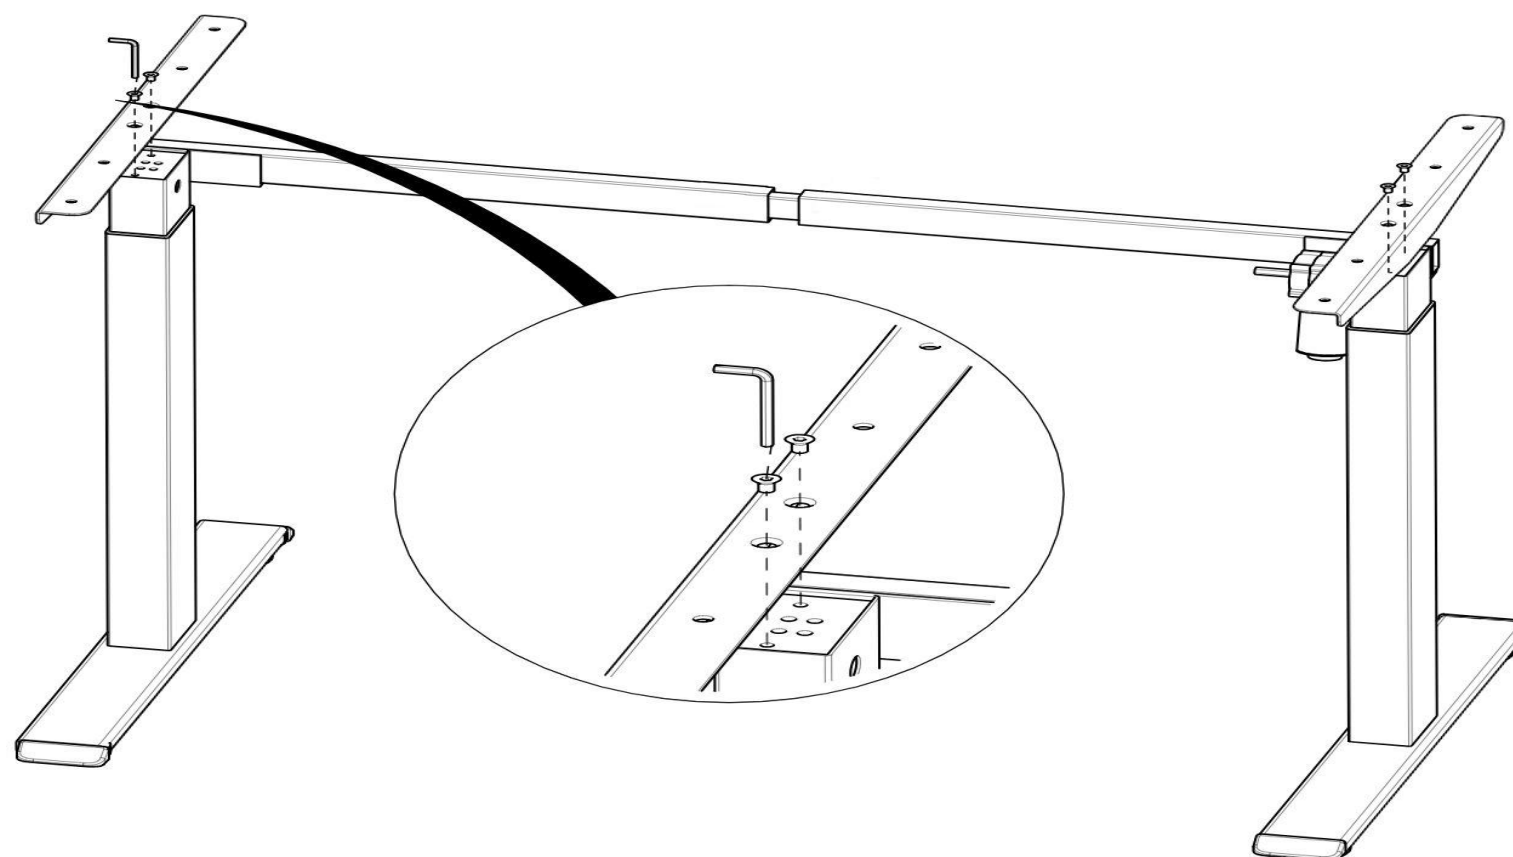

5

**Assemble the Hexagonal Bar****Align the ends of the Hexagonal Bar with  
the reserved hole of the Lifting Column  
and the Motor, insert it, and then rotate  
and tighten it.**

5

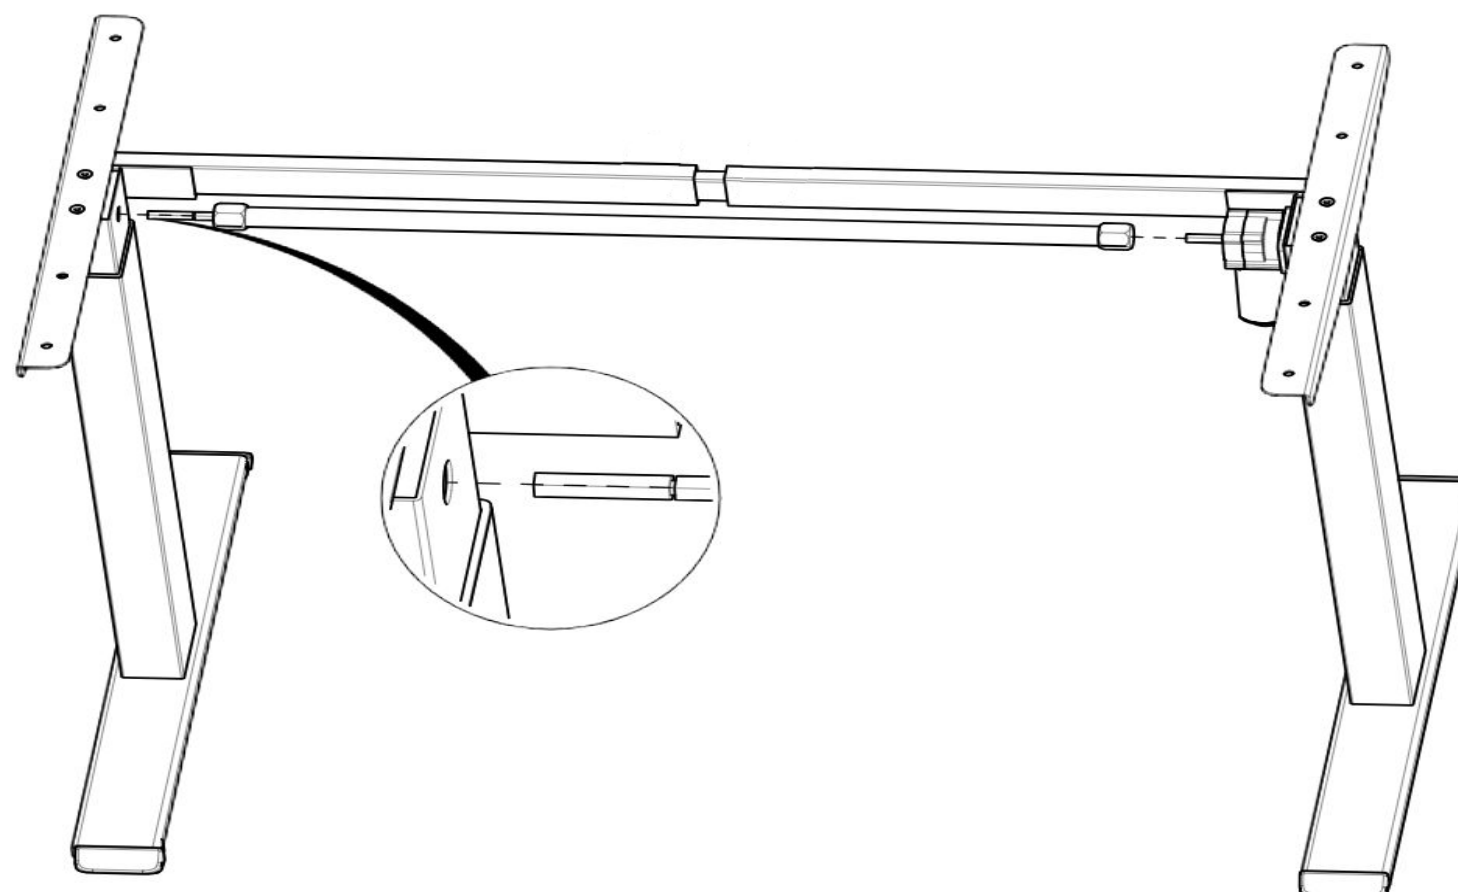




6



M5\*16 Qty: 8

**Assemble the Desktop****Use M5\*16 Self-tapping Screws****( Totally use 8 screws )**

6

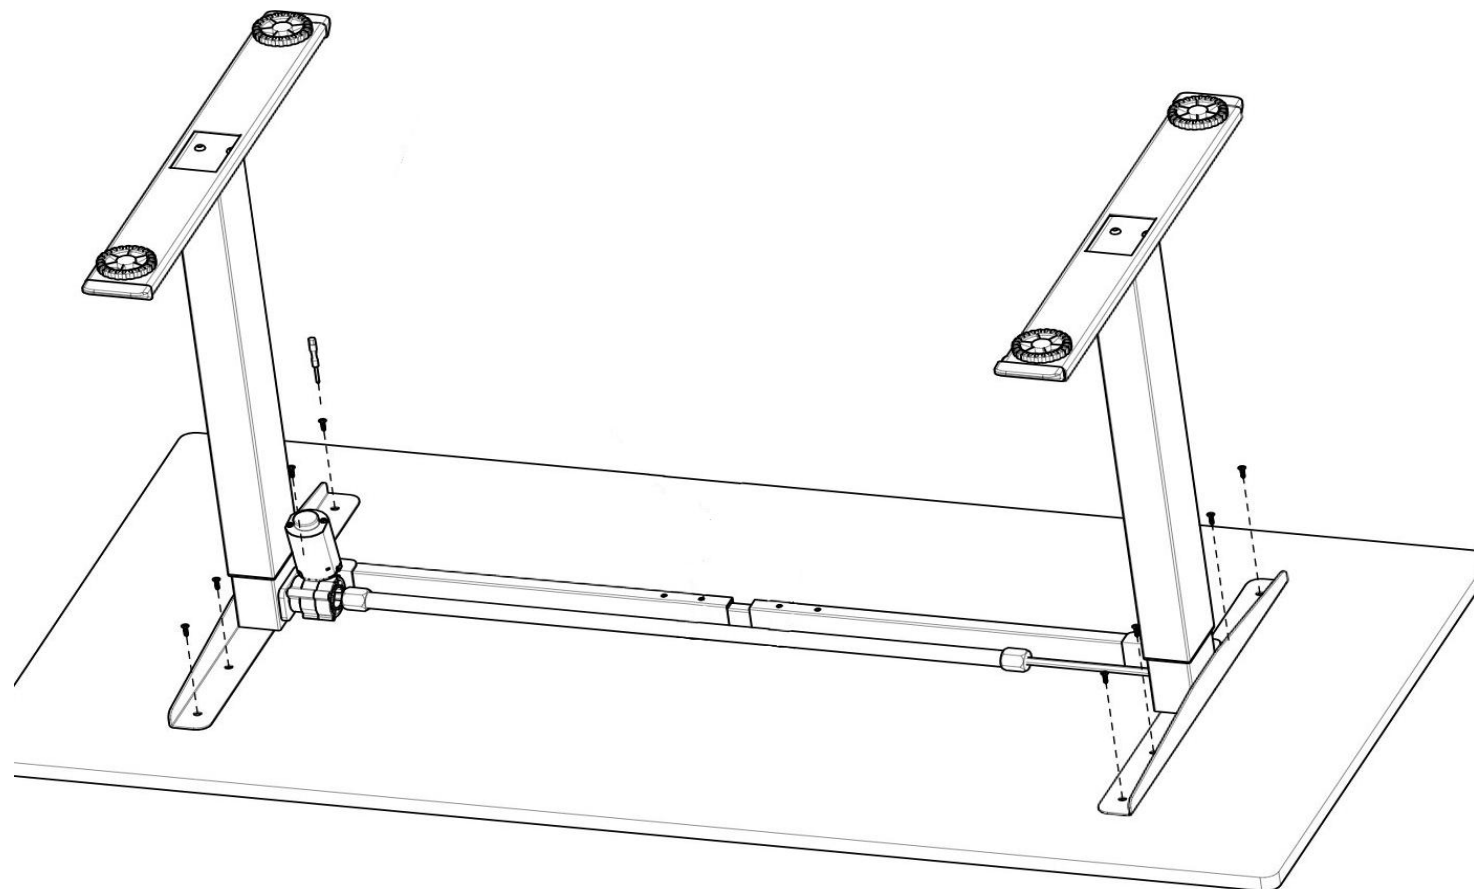


7



M4\*16 Qty: 2

**Assemble the Handset and Power Adapter****Use the M4\*12 self-tapping screws to fix the Handset, then connect the Power Adapter and the Handset**

7

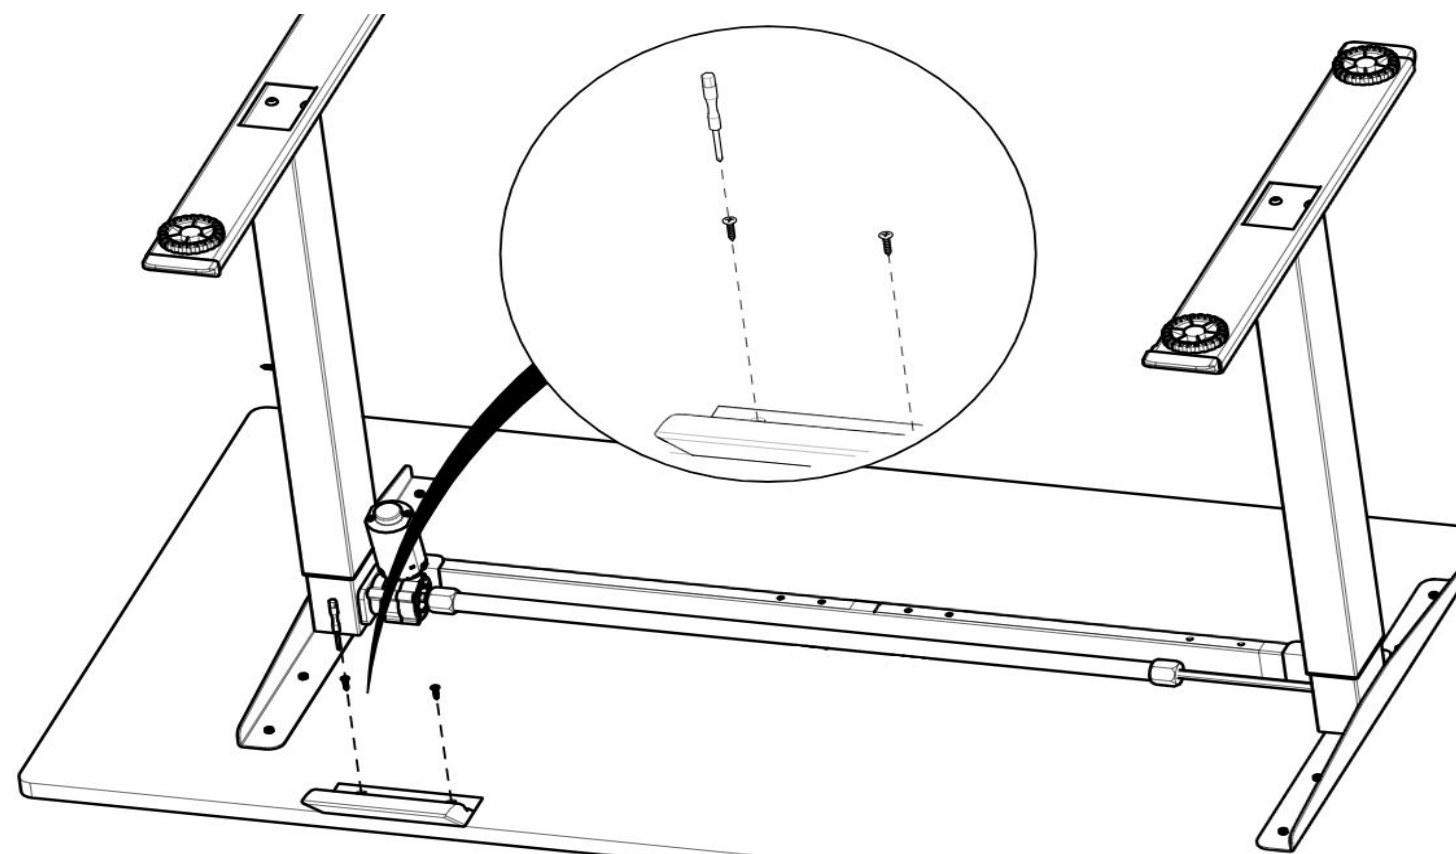

**External Picture**

